## **Installation Instructions**



## CP8 8 Quart Calf Pail Hanger Bracket Installation

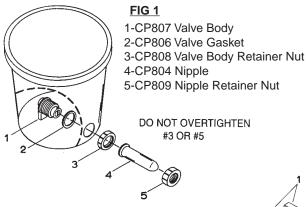



FIG 1 replacement parts available to purchase:

CP805CPK-Valve Assembly Contains #1, 2, 3, 5

CP804PK-Nipple Contains #4

## See FIG 2

- Line up top of mounting plate (2) with 8 quart graduation mark on the inside of the pail.
- While holding mounting plate in place, trace 4 holes onto bucket for drilling.
- Remove mounting plate.
- Drill 4 1/4"holes.
- After holes are drilled, line up the mounting plate on the inside of the bucket with the holes. Also line up the brackets on the outside of the bucket with the holes.
- Thread bolts through mounting plate, bucket and mounting brackets.

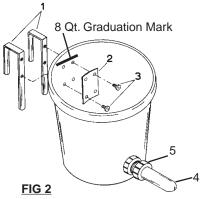

1-CP801 Hanging Brackets (2) 2-CP802 Mounting Plate 3-CP803 1/4" x 3/8" Bolts (4) 4-CP804 Nipple 5-CP805CPK Valve Assembly

FIG 2 Replacement parts available to purchase:

CP8KIT-Parts kit Contains #1, 2, 3, 4, 5

## MILLER MANUFACTURING COMPANY

1450 West 13th Street • Glencoe, MN 55336 USA (651) 952-5100 • FAX (651) 982-5101 www.miller-mfg.com